



Turn nib at 10-degree pitches from standard position & adjust to desired angle.



Even if your usual grip puts the nib in an incorrect position, you can adjust the nib angle to suit your gripping habit.

🖉 Natural Fit Grip



2 gently sloped sides for a natural fit in your fingers. Ample contact surface enables stable gripping.



Open the cap, twist off the barrel and pull the ring down.

Reattach the barrel.

How to Rotate TUZU Nib



Slide the grip as shown in (), and as shown in (), adjust the nib and grip to the angle that suits you.



With nib's anchor icon facing up, write with pen at a slight slant.



Choose desired angle and slide the grip back on, then push the ring back up to its original position.