


CUSTOM 823 How to Fill with Ink

Carrying and Writing

Carrying

Writing

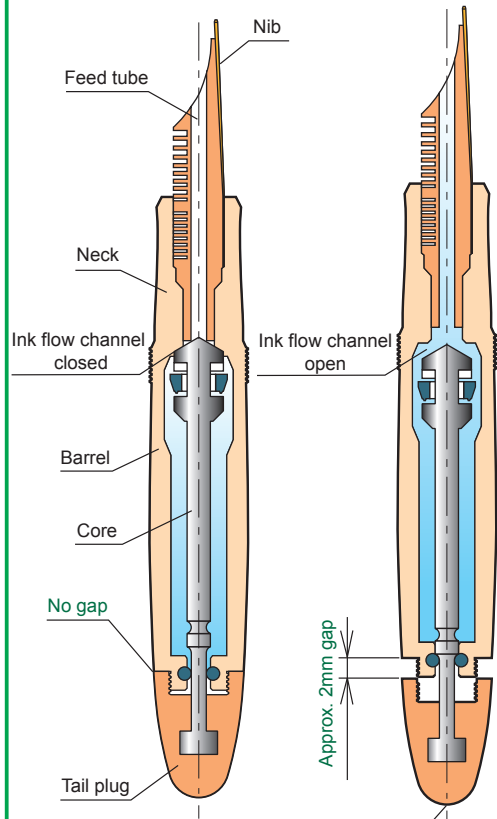

Before use, keep the nib upward and unscrew the tail plug to make a 2mm gap.

Do not pull out the tail plug fully.

Note: White lubricant is applied inside the pen barrel for proper piston functioning.

Filling Instructions

1

Hold the pen keeping the nib upward. Pull the tail plug gently until the stopper works.


2

Keep pulling out the tail plug until the piston stops at the end of the barrel.

3

Immerse the pen up to its neck in ink and then push the tail plug back in.


4

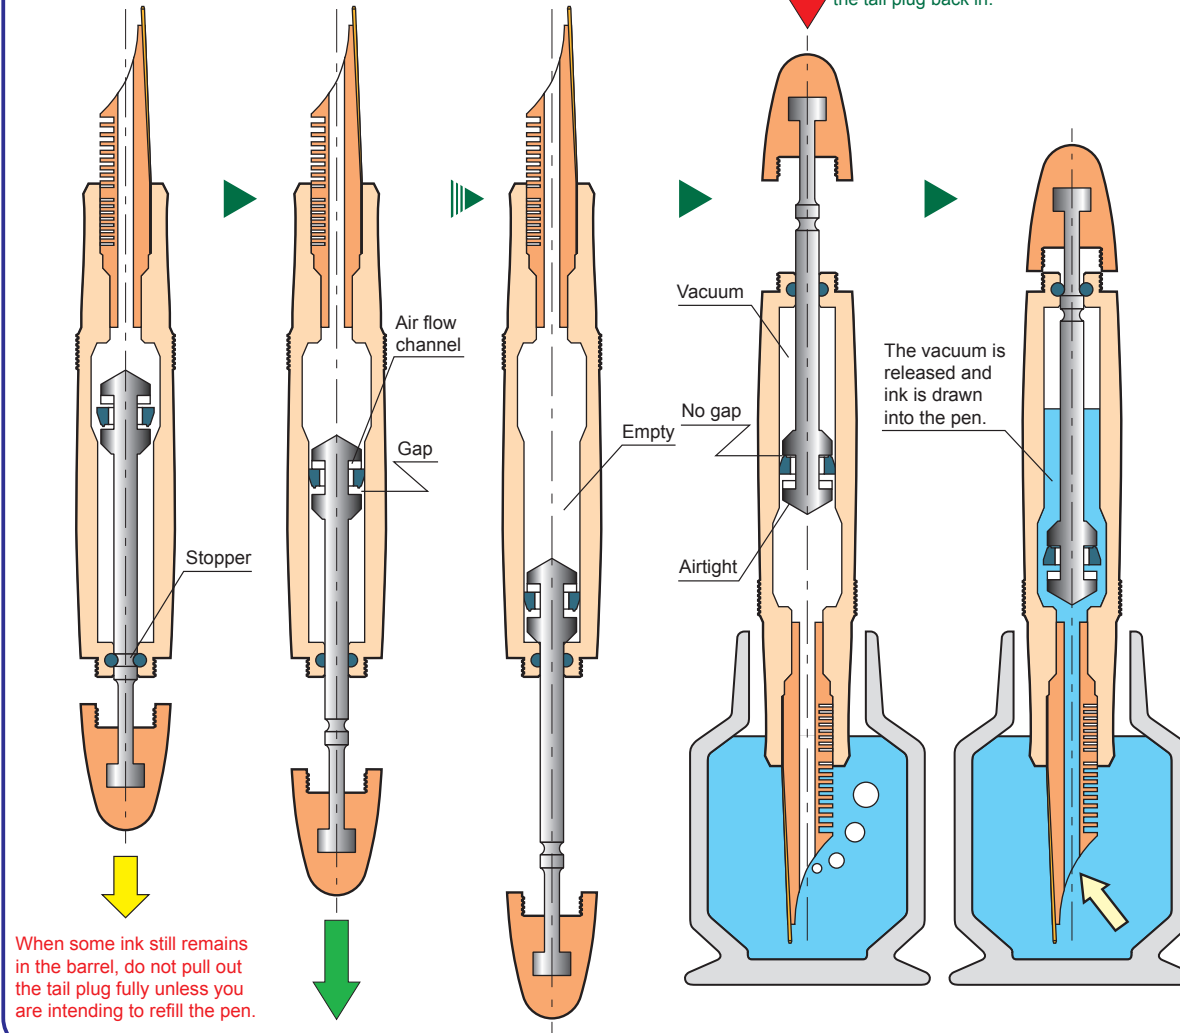

When some ink still remains in the barrel, do not pull out the tail plug fully unless you are intending to refill the pen.

How to work the piston valve

When pulling the tail plug

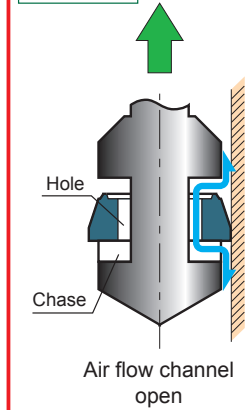

When pushing the tail plug

